

### Installation Instructions

#### Model MKB-2

#### Annunciator/Keypad Module

The **SIEMENS** Model MKB-2 Annunciator communicates with the MMB-1/-2 Main Control Board through the System network link. The MKB-2 provides the MXL with its primary control and annunciation.

### OPERATION

The MKB-2 has an 80-character, backlit LCD alphanumeric display that continuously updates information about the System status and user defined device messages (See Figure 1). If there are multiple alarms and/or troubles that include supervisories and security conditions, the MKB-2 displays the highest priority event that occurred. The user can see additional alarm and trouble data by pressing the NEXT key. Press the HOLD key at any time to stop the display from scrolling.

There are switches for the following functions:


- Acknowledging fire alarms (**ALARM ACK**)
- Silencing audibles (**AUD SIL**)
- Acknowledging supervisories (**SUPV ACK**)
- Acknowledging troubles (**TRBL ACK**)
- Acknowledging security conditions (**SEC ACK**)

There is also a separate key for resetting the Control Panel (**RESET**).

The 10-digit numeric keypad allows entry of the three levels of user passwords. It also does

specific menu-driven operations as well as programming and maintenance functions.

Another series of switches located on the MKB-2 allows the user access to the MXL Control menu. There are also System status indicator LEDs. The **ALARM** and **TROUBLE** LEDs function even if the main processor fails (See Figure 1).

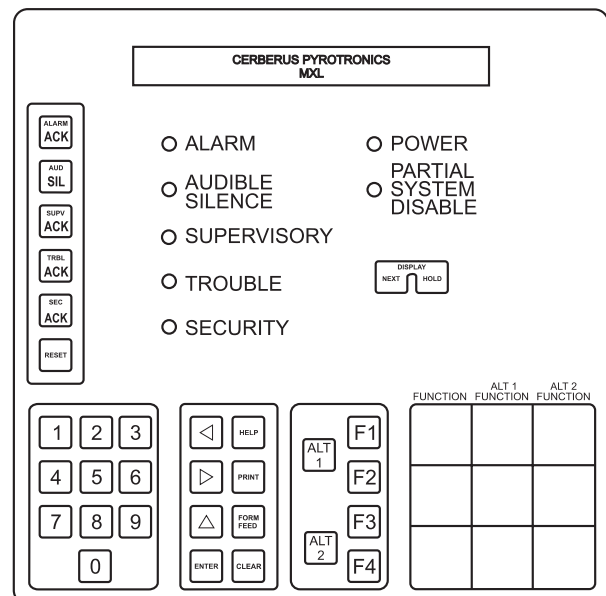

**Figure 1**  
**MKB-2 Panel**

## INSTALLATION

**Remove all system power before installation, first battery and then AC.**

(To power up, connect the AC first and then the battery.)


Unpack the MKB-2. Inspect the module for such things as integrated circuits (ICs) not firmly seated in their sockets, bent IC pins, connectors not properly installed, dirt, and packing material on the board.

### NOTE:

The MKB-2 is supplied with the keyboard annunciator mounted to the hinged panel, but with black filler plates installed to the right and left to accommodate a telephone and microphone, if used. To install the telephone module (TMM-1) or microphone module (MMM-1) on the MKB-2, follow the installation instructions which accompany those modules (P/N 315-092098 and P/N 315-092099, respectively).

### Setting the Network Address (See Figure 2 )

1. Before installing the MKB-2 panel, set its network address on S1, the switch on the ANN-1 board located on the back of the MKB-2. Use dipswitches SW1 and SW2 on switch S1 to set the network address of the MKB-2.

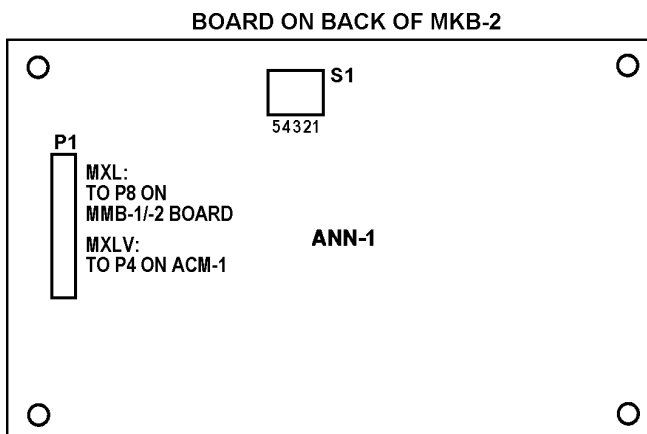

**Figure 2**  
**Setting S1 on the ANN-1 Board**

2. The MKB-2 module address is always set within network addresses 248 through 251. Set the individual switches as follows:

**TABLE 1**  
**SWITCH SETTINGS ON THE ANN-1**

SWITCH	ADDRESS SETTINGS FOR:			
	248	249	250	251
S1-SW1	Open-OFF	Closed-ON	Open-OFF	Closed-On
S1-SW2	Open-OFF	Open-OFF	Closed-ON	Closed-ON
S1-SW3	Closed-ON	Closed-ON	Closed-ON	Closed-ON
S1-SW4	Closed-ON	Closed-ON	Closed-ON	Closed-ON
S1-SW5	See Setting Supervision			

**NOTE:** Switches S1-SW3 and S1-SW4 are for future use. Switch S1-SW5 is used to select supervision.

3. **One supervised MKB-2 must be installed at network address 251. Other supervised MKBs may be at the other addresses.**

### Setting Supervision

Use switch S1-SW5 on the ANN-1 to select or deselect supervision. If your ANN-1 has a switch with position 1 indicated on the left-hand side, ignore the printing on the switch. SW1 on S1 is at the extreme right-hand side of S1, regardless of any other marking.

**To set for supervision**  
**S1-SW5 = Closed (ON)**

**To set for non-supervision**  
**S1-SW5 = Open (OFF)**

The supervisory mode is independent of the network address.

**NOTE:** When you select non-supervision for an annunciator, there must also be **one and only one** supervised annunciator at the same address. The supervisory mode is independent of the network address.


## Mounting the MKB-2 (Refer to Figure 3)

1. Install four screws in the first group of four tapped holes in the right flange. Leave a  $\frac{1}{8}$ -inch gap between the head of the screw and the flange. Slide the slots of the MKB-2 panel hinge under the head of the screws and tighten.
2. If the panel locking fastener is not aligned with the hole located on the left flange, loosen the screws and adjust accordingly. Retighten the screws.

3. After the MKB-2 is mounted, if it is used with an MXLV system, connect the ANN-1 to P4 on ACM-1, and connect P5 on ACM-1 to P8 on the MMB-1/-2. Otherwise, the MKB-2 is mounted to the enclosure and the cable (P/N 555-192238) is connected between P1 on the ANN-1 (on the back of the MKB-2) and P8 on the MMB-1/-2.

### CAUTION:

Be sure the black tracer wire on the edge of the cable is close to the 1 on position 1 of connector P1 on the ANN-1 and the 1 on position 1 of P8 on the MMB-1/-2 or position 1 of P4 on the ACM-1.

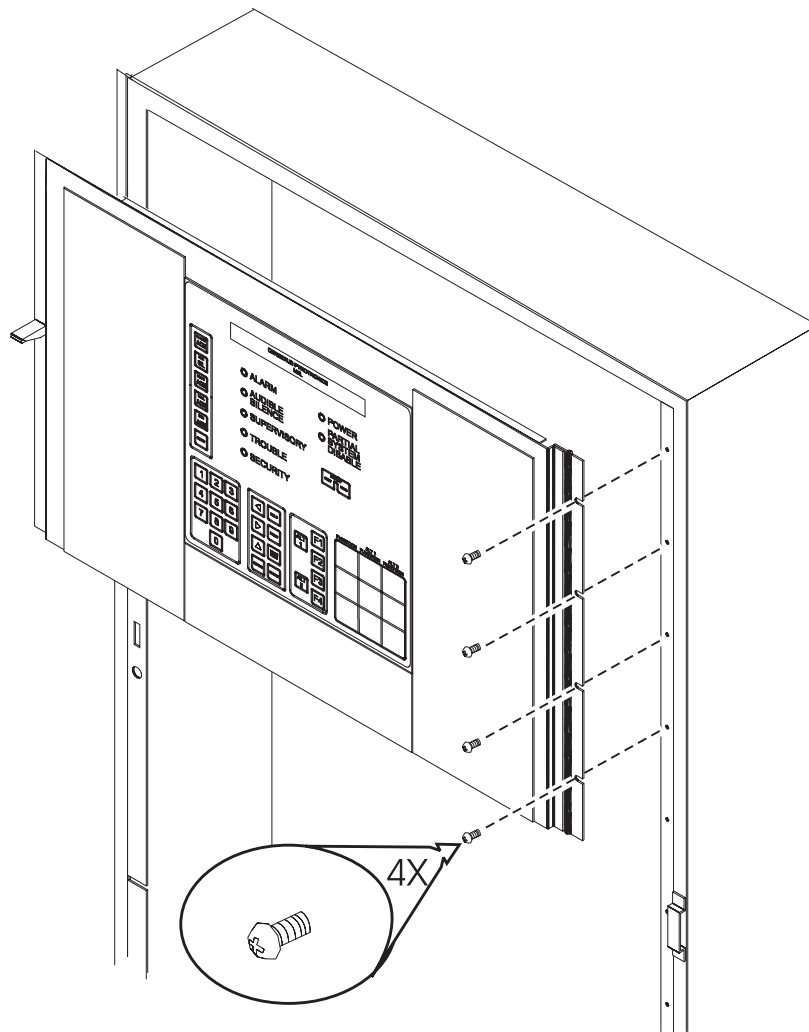

**Figure 3**  
**Installing the MKB-2 Annunciator/Keyboard**

---

Siemens Building Technologies, Inc.  
8 Fernwood Road  
Florham Park, New Jersey 07932

P/N 315-092087-4

Siemens Building Technologies, Ltd.  
2 Kenview Boulevard  
Brampton, Ontario L6T 5E4 CN